

QUICK REFERENCE GUIDE



Coolpad QUATTRO™ 4G
metroPCS

PHONE OVERVIEW



- | | |
|------------------------|-----------------|
| 1. Earpiece | 7. Back Key |
| 2. Front-facing Camera | 8. Power Key |
| 3. Touchscreen | 9. Volume Key |
| 4. Home Key | 10. Camera Lens |
| 5. Menu Key | 11. Camera Key |
| 6. Search Key | |

SENDING AN SMS/MMS

1. To create a new message, select the Messaging icon from the main interface and then select "Compose new message" option.
2. Directly input the message recipient's phone number into the "To:" box or tap the Recipient icon to select the desired recipient(s) from your Contacts list.
3. Type your desired message into the message box.
4. Tap "Send" to send your message and a copy of it will be saved in the Sent mailbox. If you tap the "Back" button prior to sending the message, the message will be automatically saved in the Drafts mailbox.
5. To convert the SMS into a MMS, tap the Menu key and attach photos, audio files, videos, and/or other file types based on your needs.
6. Tap "Send" to send the message as a MMS. If you tap "Back" prior to sending the message, the message will be automatically saved as a Draft.


SETTING UP AN EMAIL INBOX

1. You can apply for an email address/mailbox from third-party websites, or log in with a pre-existing email address/mailbox.
2. In the email inbox interface, press the Menu key to add an account or select a pre-existing account.
3. Press and hold an email account to access a pop-up menu with options for account settings and operations.

SENDING AN EMAIL

1. At the email inbox interface, press the Menu key and select "Compose" to create a new email message.
2. Manually input the receiver's email address into the "To:" box and input the subject and content of the message if desired.
3. Tap "Send" to deliver the email to the specified receiver.

CONNECTING TO WI-FI

- In the pulldown menu, tap the Wi-Fi icon to enable or disable Wi-Fi connectivity.
1. Press the Menu key and select  to access your device's settings. Navigate to and choose "Wireless & networks" to modify network connections.
 2. If Wi-Fi is not enabled, touch to enable Wi-Fi. Select "Wi-Fi Settings" to customize wireless connections.
 3. Select which Wi-Fi network you wish to connect to.
 4. If the network is secured, you will need to enter a password. Upon finishing, select "Connect".

BLUETOOTH® CONNECTIONS

1. To access Bluetooth settings, press the Menu key, choose "Settings", and select "Wireless & networks" to enter the interface.
 2. Tap "Bluetooth" to enable or disable Bluetooth connectivity; select "Device Name" to change the Bluetooth device's name; select "Discoverable" to allow your device to be recognized by other Bluetooth-enabled devices (it is only discoverable for 120 seconds).
 3. Tap "Scan for Devices" to search for other Bluetooth-enabled devices to connect to.
- *Your device supports Bluetooth and can connect with Bluetooth devices from up to 32 feet.


DOWNLOADING APPLICATIONS

- The Google Play™ Store and @metro App StoreSM offer thousands of free and paid applications for your device.
1. Press the "Play Store" icon on the Home screen and log in with your Google™ account, or create a new one to access Android™ applications.
 2. Press the "App Store" icon on the Home screen to access MetroPCS® applications.
 3. Browse featured applications, select applications for the top charts, and search for applications based on name, category or subject.
 4. Select an application and follow the on-screen instructions to download and install the application.

CAPTURING & SHARING VIDEOS

1. Select the "Camcorder" application from the applications menu.
2. In the camcorder interface, select the various icons on the interface to adjust color effect(s), white balance, contrast, video quality, etc. for your video.
3. After you have selected your preferred video settings, aim your camera lens and press "shoot" to begin.
4. Press the "Shoot" button again to stop recording the video.
5. Select the short video that you want to play and/or share. Press "Share" and select YouTube™.
6. Enter a title for your video and select "Upload" to share your video on YouTube™.

BROWSING THE WEB

1. Select  on the Home screen or press the Search key on the device to perform a Google™ search.
2. To perform basic web browsing operations, such as opening a new window, adding bookmarks, and refreshing the website, tap the Menu key and select the desired command.